

BATTERY PRECAUTION

- Panic Button Battery: A23S Battery
- When red LED is on (main unit), the backup battery is low.
- If the LED on Panic Button turns red when Panic Button is pressed, it is time to change the battery.



Assistive Technology Services

“Our mission is to provide evaluation, consultation, spiritual guidance and assistive devices to make the quality of life better for those that need a little help.”

Nashville, TN: 615-562-0043
Cookeville, TN: 931-303-5308
Murfreesboro, TN: 615-308-9165

To see *MANY* more assistive products,
Visit our website:
www.ATS-TN.com

email: questions@ATS-TN.com


HELP DIALER 700 MANUAL




INSTRUCTION MANUAL

POWER AND TELEPHONE CONNECTION


- Open the cover at the top of main unit (will see DC hole and telephone plug socket)
- Insert one end of adaptor (included) to DC hole and other end to AC power supply outlet
- Insert one end of telephone cable (included) into telephone jack and other end into main unit

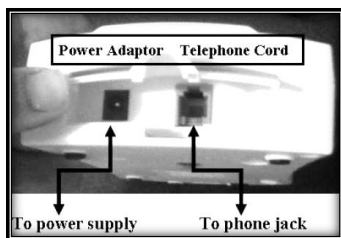

For backup power, insert 4 AAA batteries (not included) into battery compartment located on back of unit.

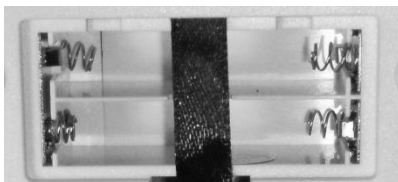

Turn **on** unit with switch located at side of unit. The green LED (power indicator) and red LED will flash for 3 seconds to indicate unit is ready to record and store numbers.

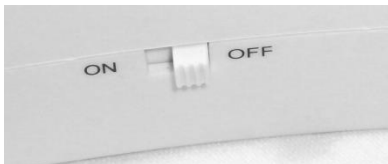

PERSONALIZE EMERGENCY MESSAGE



Press and hold the above buttons on the keypad – at the same time. The red LED light will come on. You have (6) seconds to record your



personal message. To playback your recorded message, press button:







NOTE: To change the recorded message, repeat steps above

STORE TELEPHONE NUMBERS

To store telephone numbers, follow these steps:

Press button  + **1** + phone number +  to store first number

Press button  + **2** + phone number +  to store second number

Press button  + **3** + phone number +  to store third number

NOTE: If you make a mistake, simply repeat the process above

OPERATION

Press the round button on Panic Button or on main unit. The main unit will dial the (3) preset numbers automatically. It will call each number for (45) seconds. If the receiver does not answer the phone, it will keep dialing for (5) cycles and then go into standby mode.

When the receiver answers the call from the Help Alert 700, they will hear the pre-recorded message. The receiver of the call can then open up a two-way communication and listen to the caller's surroundings by pressing any number on their telephone keypad. After communicating for approximately (45) seconds, the receiver will hear (3) "beep" tones to advise receiver to extend the talk and listen time. Receiver can extend the time by pressing any number on their keypad to extend for another (60) seconds of talk and listen time. When the conversation is over, the main unit will go back to standby mode. If the call is answered, the main unit will stop dialing the remaining contacts.